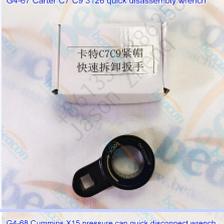


## Recommend EUI EUP Tools

NO.	Description&Function	Photo	
01	G4-80 Delphi F2 Series Injector Angle Calibrator,18KG	 <p>ALIGNMENT TOOL FOR DELPHI INJECTORS MOD.F2</p> <p>Accurately adjust the atomization angle of the fuel injector</p>	 <p>G4-80 DELPHI FUEL INJECTOR ANGLE CALIBRATOR</p> <p>Angle adjustment and cap installation are completed in one step</p>
02	G4-25 Dongfeng Longqing Tool Set for Disassembly, Inspection, Calibration, and Valve Testing	 <p>G4-25 Dongfeng Longqing tool set</p>	 <p>G4-25 Dongfeng Longqing tool set</p>
03	G4-64 MTU4000 Injector Removal Tool,6KG	 <p>G4-64 MTU4000 Injector Removal Tool</p>	 <p>G4-64 MTU4000 Injector Removal Tool</p>
04	G4-73-vw Pump Nozzle Disassembly and Assembly Kit,5KG	 <p>G4-73 vw Pump Nozzle Disassembly and Assembly Kit</p>	 <p>G4-73 VW PUMP NOZZLE REMOVAL KIT</p>
05	G6-34 Scania Pump Nozzle Clearance Adjuster,1KG	 <p>G6-34 Scania Pump Nozzle Clearance Adjuster</p>	 <p>G6-34 Scania Pump Nozzle Clearance Adjuster</p>
06	G4-31 Scania EUI disassembly and assembly measurement tool	 <p>G4-31 Scania EUI disassembly and assembly measurement tool</p>	 <p>G4-31 Scania EUI disassembly and assembly measurement tool</p>
07	G4-65 Iveco Injector Installation Tool,3KG	 <p>G4-65 Iveco Injector Installation Tool</p>	 <p>G4-65 Iveco Injector Installation Tool</p>

08	G4-30 DAF injector repair tool		
09	G1-24 EUI EUP spring removal tool		
10	G1-19 Simple EUI EUP Assembly and Disassembly Rack,10KG		
11	G1-27 EUI EUP Spring Pneumatic Dismantling Machine,20KG	<p>G1-27 EUI EUP SPRING PNEUMATIC DISASSEMBLER</p> 	<p>G1-27 EUI EUP SPRING PNEUMATIC DISASSEMBLER</p> 
12	G4-27 Volvo/Delphi EUI quick wrench		
13	G4-66 CAT C13 pressure cap quick release wrench	<p>G4-66 Carter C13 pressure cap quick release wrench</p> <p>卡特 C13 喷油器塞帽快速扳手</p> 	<p>G4-66 Carter C13 pressure cap quick release wrench</p> 
14	G4-67 CAT C7 C9 3126 quick disassembly wrench	<p>G4-67 Carter C7 C9 3126 quick disassembly wrench</p> 	<p>G4-67 Carter C7 C9 3126 quick disassembly wrench</p> <p>卡特C7C9塞帽快速拆卸扳手</p> 
15	G4-68 Cummins X15 pressure cap quick disconnect wrench	<p>G4-68 Cummins X15 pressure cap quick disconnect wrench</p> <p>康明斯X15塞帽快速拆卸扳手</p> 	<p>G4-68 Cummins X15 pressure cap quick disconnect wrench</p> 

<p>16 G4-42-Volvo Removal Tool</p>	 <p>G4-42 Volvo disassembly tool</p>	
<p>17 G15-81 EUI EUP grinding tool</p>		
<p>18 G5-16 Cummins EUI fuel injector disassembly and assembly tool</p>		
<p>19 G5-17 Volvo injector disassembly and assembly tool</p>		
<p>20 G4-63 Detroit injector repair kit,6KG</p>	 <p>G4-63 Detroit injector repair kit</p>	 <p>G4-63 Detroit injector repair kit</p>
<p>21 G5-38 CAT 3116 Injector Removal Tool ,3KG</p>	 <p>G5-38 CAT 3116 Injector Removal Tool</p>	 <p>G5-38 CAT 3116 Injector Removal Tool</p>
<p>22 G4-62 CAT 3500 pump nozzle disassembly tool,6KG</p>	 <p>G4-62 CAT 3500 pump nozzle disassembly tool</p>	 <p>G4-62 CAT 3500 pump nozzle disassembly tool</p>
<p>23 G6-21 CAT EUI C13 Disassembly Measurement Tool</p>		

<p>24 G6-50-CAT C13 residual breath measurement stand,1KG</p>	 <p>G6-50-CAT C13 residual breath measurement meter</p>	 <p>G6-50-CAT C13 residual breath measurement meter</p>
<p>25 G4-78 Cummins (XPI) HPI Actuator Armature Valve Spool Repair Kit,5KG</p>	 <p>G4-78 CUMMINS (XPI) HPI ACTUATOR ARMATURE SPOOL VALVE REPAIR KIT</p>	 <p>G4-78 CUMMINS (XPI) HPI ACTUATOR ARMATURE SPOOL VALVE REPAIR KIT</p>
<p>26 G15-48 Cummins EUI repair tool</p>		
<p>27 G8-9 Volvo two-wire and four-wire EUI injector repair tool</p>		
<p>28 G5-40 Cummins QSK19 Disassembly Measurement Kit,5KG</p>	 <p>G5-40 Cummins QSK19 Disassembly Measurement Kit</p>	 <p>G5-40 Cummins QSK19 Disassembly Measurement Kit</p>
<p>29 G8-8 Cummins M11-N14 Pump Nozzle Finishing Tool,7KG</p>	 <p>G8-8 Cummins M11-N14 Pump Nozzle Finishing Tool</p>	 <p>G8-8 Cummins M11-N14 Pump Nozzle Finishing Tool</p>
<p>30 G8-20 Cummins Q60 Controller Repair Tool,6.5KG</p>	 <p>G8-20 Cummins Q60 Controller Repair Tool</p>	 <p>G8-20 Cummins Q60 Controller Repair Tool</p>
<p>31 G8-21 Cummins M11 N14 pump nozzle disassembly and assembly kit (9)</p>	 <p>G8-21 Cummins M11 N14 pump nozzle disassembly and assembly kit</p>	 <p>G8-21 Cummins M11 N14 pump nozzle disassembly and assembly kit</p>

<p>32 G4-55 Cummins Q60 Nozzle Leakage Test Tool (3)</p>		
<p>33 G4-2 Cummins HPI Q60 injector disassembly and assembly tool</p>		
<p>34 G4-3 Cummins KTA19 injector disassembly tool</p>		
<p>35 G4-4 Cummins ISX 15 Disassembly Tool</p>		 <p data-bbox="1171 887 1426 1111">           康明斯ISX喷油嘴拆卸工具            Cummins Isx arretrato la pompa            127898 1002194            NO.1032018            产品说明            康明斯ISX喷油嘴拆卸工具，主要用于拆卸喷油嘴。            Product introduction            Cummins Isx arretrato la pompa device, mainly used            for disassembly of the nozzle cap, not disassembly and other            maintenance requirements.            L'ignifera arretrato di cap ammontare la chiave            127898 1002194            NO.1032018            产品说明            康明斯ISX喷油嘴拆卸工具，主要用于拆卸喷油嘴。            Product introduction            Cummins Isx arretrato la pompa device, mainly used            for disassembly of the nozzle cap, not disassembly and other            maintenance requirements.         </p>
<p>36 G4-46 Cummins M11 N14 pump nozzle solenoid valve repair kit</p>		
<p>37 G4-37 Xikang M11 Disassembly and Assembly Measuring Tool (8-piece set),3KG</p>		
<p>38 G4-5 Cummins M11 disassembly tool</p>		
<p>39 G14-44 Delphi-E3 pump nozzle grinding and stroke measurement adjustment tool,7KG</p>		

<p>40 G4-79 Delphi Euro VI Injector Disassembly and Assembly Test Kit,7KG</p>		
<p>41 G4-6 Delphi Hyundai EUI disassembly tool</p>		
<p>42 G4-7 Scania EUI disassembly and assembly tool</p>		
<p>43 G4-8 Volvo EUI injector repair tool</p>		
<p>44 G4-9 CAT C13/15 EUI disassembly tool</p>		
<p>45 G4-10 CAT 3512 series EUI disassembly tool</p>		
<p>46 G4-21 Cummins ISG injector disassembly/measurement/calibration tool set</p>		
<p>47 G8-4 Delphi E1 E3 EUI Repair Tool</p>		

<p>48 G4-39 CAT C7C9 Injector Disassembly and Assembly Tool Set</p>		
<p>49 G15-68 c10 c11 c12 c13 c15 c18 CAT EUI Service Tool</p>		
<p>50 G8-3 Bosch EUI Repair Tool</p>		
<p>51 G370 CAT EUI 3116 test base</p>		
<p>52 G4-11 CAT HEUI C7C9 disassembly tool</p>		
<p>53 G8-18 Cummins HPI QSX15 ISX15 Q60 actuator maintenance test tool</p>		
<p>54 G4-59 Cummins X15 disassembly tool,3KG</p>		
<p>55 G4-38 Cummins QSX15 Disassembly and Assembly Tool Set</p>		

<p>56 G4-54 Longqing single pump disassembly and assembly tool</p>		
<p>57 G4-56 DF-LQ Adapter</p>		
<p>58 G15-54 EUI EUP valve core grinding tool</p>		
<p>59 G5-39 common rail injector EUI EUP HEUI disassembly and assembly bracket</p>		
<p>60 M11 N14 volovo C7 C9 345E 3408 C12 C13 C15 3512 3116 BOSCH M28 EUI adapter</p>		
<p>61 G5-42 Caterpillar 345E EUI Tool</p>		
<p>62 G348 Cummins QSK19 disassembly and assembly measurement kit</p>		
<p>63 G5-43EUI EUP fuel injector disassembly and assembly tool</p>		

64	G4-19 M11 control valve disassembly tool		
65	G5-25 Pump Nozzle Disassembly Tool		
66	G4-41 PT Injector Disassembly and Assembly Tool	<p>G4-41 PT Injector Disassembly and Assembly Tools</p> 	<p>G4-41 PT Injector Disassembly and Assembly Tools</p> 
67	G15-19 fuel injector pry bar	<p>G15-19 fuel injector pry bar (set of four)</p> 	<p>G15-19 fuel injector pry bar (set of four)</p> 